


## **CONTENTS**

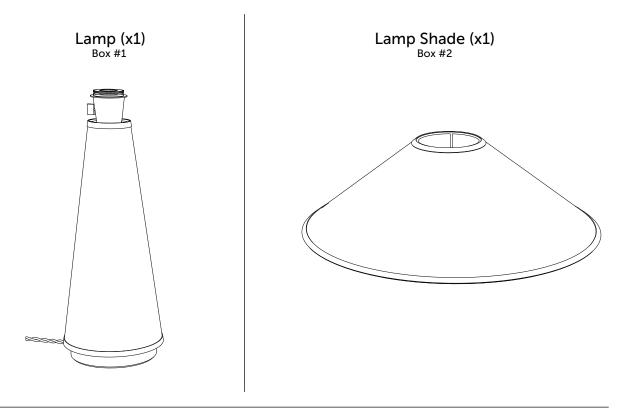

<sup>\*</sup>Use caution when unpacking lamp and shade. Lamp shade material is fragile.

## CARE INSTRUCTIONS

The Linden Table Lamp features a hollow fabric body. Plase take extra care when handling the lamp. Always move it by supporting the wooden base with one hand and the brass neck with the other. To clean, gently vacuum or wipe with a damp cloth.

## SAFETY INFORMATION

WARNING: RISK OF FIRE/INJURY TO PERSONS. Keep away from combustibles. Turn off/unplug lamp to change bulb. Do not touch bulb when lamp is turned on. Bulb may be hot.

Suitable for dry, indoor use only.

Use only lamp shades provided by Studio DUNN. Remove dust covers before use. Do not attempt to disassemble or re-wire the lamp. Follow attached mechanical assembly instructions to apply and remove the lamp shade.


Do not use bulbs that exceed 100 watts (E-26 medium base socket). Studio DUNN recommends long-lasting and environmentally friendly LED bulbs.

This lamp has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless the plug can be fully inserted. Do not alter the plug.


Contact Studio DUNN with any questions about the safety and functions of your lamp.




- 1] Ensure lamp is unplugged prior to assembly.
- 2] Unscrew and remove knurled UNO nut (A) from lamp socket.

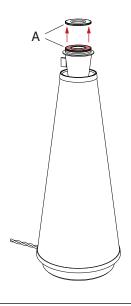

3] Carefully slide lampshade (B) around socket, and secure in place by threading knurled UNO nut (A) back onto socket.

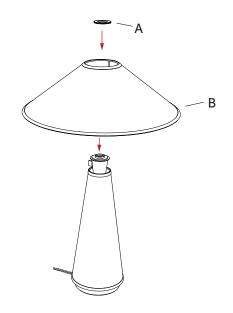

4] Screw lightbulb (sold separately) in to socket through top opening of lamp shade. Do not over-tighten bulb.

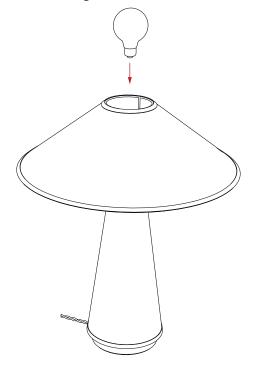

- 5] Remove shade covers and any remaining packing material.
- 6] Plug lamp into wall outlet, and rotate switch next to socket clockwise to toggle on and off.

