Maison Cédrat

INSTRUCTIONS & USER MANUAL

Collection

AURA

Lumia

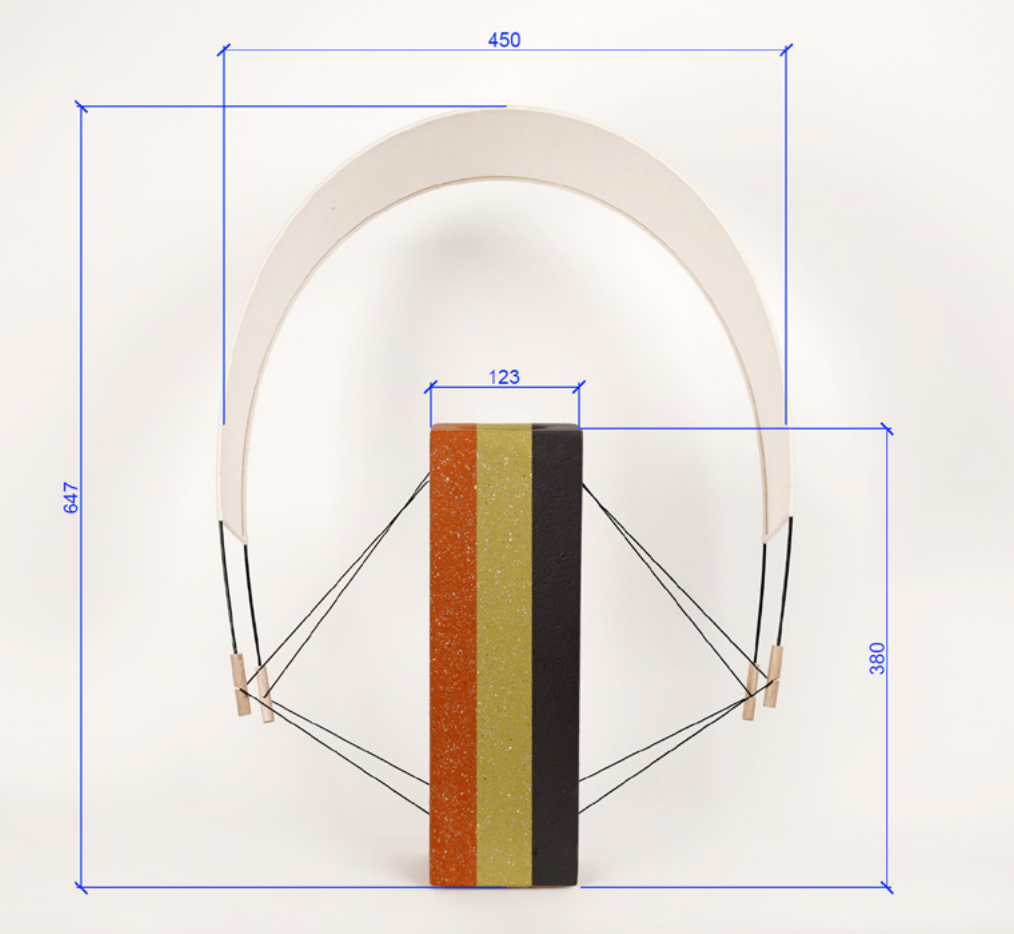

Units in mm

Maison Cédrat

E.I. PIERRE SAMOUILLA
- MAISON CÉDRAT -
13 rue des Chasseurs,
34070 Montpellier,
FRANCE

Siret : 824 667 596 00038

LUMIA model

Ref. :

MC-LUM-01 ; Terracotta finish

MC-LUM-02 ; Raw clay finish

MC-LUM-03 ; Black painted clay finish

FEATURES :

Source : **dimmable LED 6 W**
600 Lumens, E12 base

Color temperature : 3000 K
Meets requirements : *
Class : ⧈
Power supply : 110-130 V 50/60 Hz
Type of protection : IP 20

* Manufactured using cULus listed electrical components. This product is not UL or ETL listed as a complete luminaire.

Lumia Terracotta



4 • Maison Cédrat | Objects | Textiles | Lightings

Lumia Raw Clay



5 • Maison Cédrat | Objects | Textiles | Lightings

Lumia Black



6 • Maison Cédrat | Objects | Textiles | Lightings

GENERAL :

Important information. Keep for future reference.

• Regularly check the cable, switch, power plug, and all other parts to ensure they are not damaged.

Do not use the product if any part is damaged.

SECURITY :

Never open the light fixture without first unplugging it. This light is **not intended for children**. This luminaire is an **interior luminaire** and lighting fixture for premises. Place the luminaire in **a stable position.**

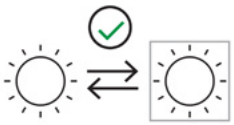

Fixing the Y type cable :

If the cable or flexible cord of this luminaire is damaged, it must be replaced exclusively by the manufacturer, its maintenance department or any person with equivalent qualification, in order to avoid any risk.

USE :

• Do not cover the luminaire, leave it near a heat source or a flame.
• Do not use halogen or incandescent bulbs.
• The bulbs recommended for this luminaire are LED type. They emit a lot of heat during use. Do not touch a working light fixture. When replacing the bulb, always allow it to cool.
• Always use a suitable bulb and never exceed the maximum power intended for, here **7 W LED** (see the bulb symbol and the words "... W max." on the packaging or instructions for the bulb purchased).
• The bulb can be replaced by passing your hand through the well in the base (see luminaire diagram), without dismantling the entire fixture, or by removing the wooden key (see **"BULB REPLACEMENT"** section).
Be careful not to damage the cable when moving the luminaire. Once the luminaire is installed, the cable must always fit into the space provided for this purpose (see luminaire diagram).
• Never install this luminaire near a source of direct (splashing water, sink, etc.) or indirect (bathroom, window, etc.) humidity.
• Do not expose this luminaire to violent drafts.
• Do not leave this luminaire within the reach of children.
• Do not leave this luminaire within the reach of pets.

Maison Cédrat

PACKAGE & ASSEMBLY

I Unpacking the package

Be sure to open the package on a clean, flat surface.
Carefully remove each item from the package and place them flat:

- a pair of gloves
- a clay base
- a paper shade
- a 6 W E12 light bulb.
- a mounting aid ribbon





Bulb



A pair of gloves

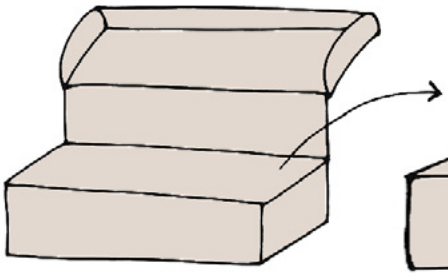



+



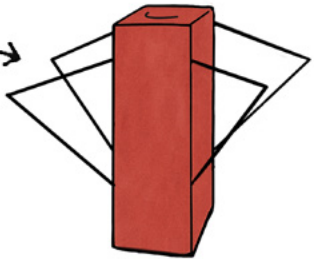

a clay base

Be sure to handle the paper shade with the provided gloves to avoid getting it dirty during installation.





Paper shade

Ribbon



Please do not undo the knot in the ribbon; it will allow you to pre-curl the paper shade.

Maison Cédrat

PACKAGE & ASSEMBLY

Be sure to open the package on a clean, flat surface.
Carefully remove each item from the package and place them flat:

2 Curve the shade

To curve the shade, it's best to work with two people!
Hold each end by the wooden handles.
Bring your hands together to **curve the shade gradually and gently.**

Take the provided ribbon and place it **around the shade to lock the tension.**

1. Grab the wooden handles, keeping them parallel.

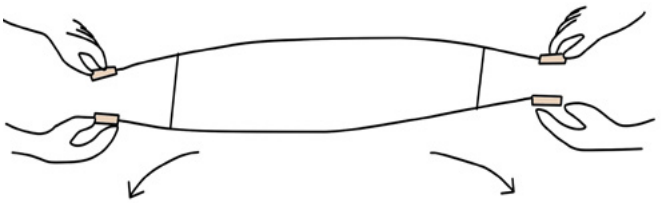

2. Curl the shade by moving the wooden handles together without twisting them.

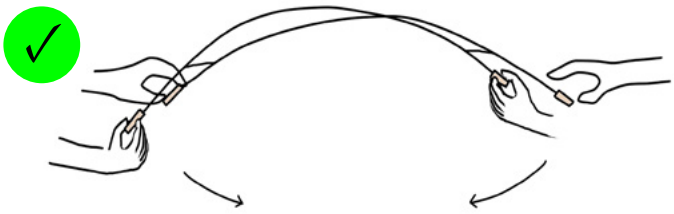

Please ensure that the wooden handles remain parallel; do not twist them, as this could damage the paper.

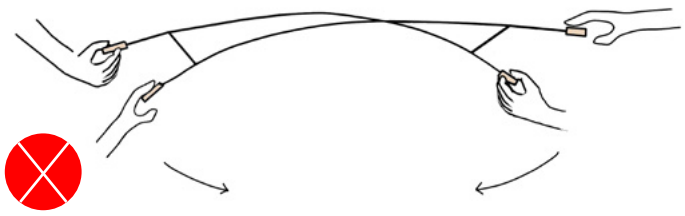

3. Lay the ribbon out in a rectangle on a flat surface and place the shade on top to thread the ribbon through.
Always keep the handles parallel.

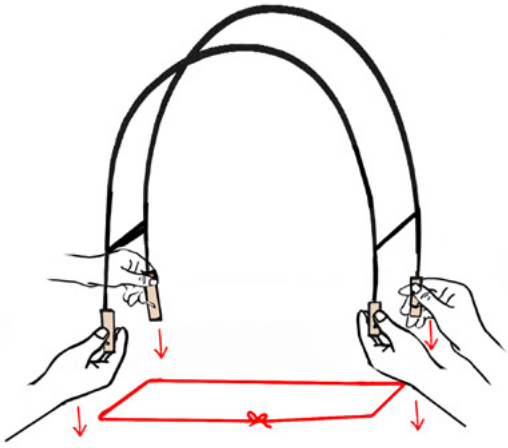

4. Thread the ribbon at the same height above each wooden handle.
Always keep the handles parallel.

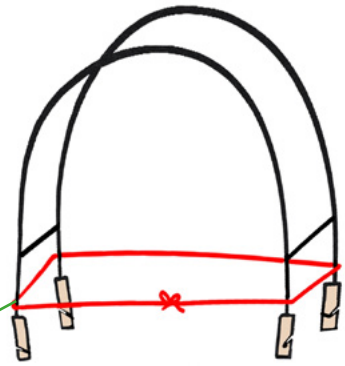

Make sure to place the cord above the wooden handles to lock it.

Maison Cédrat

PACKAGE & ASSEMBLY

3 Place the shade

Always hold the shade by the wooden handles to avoid damaging it!

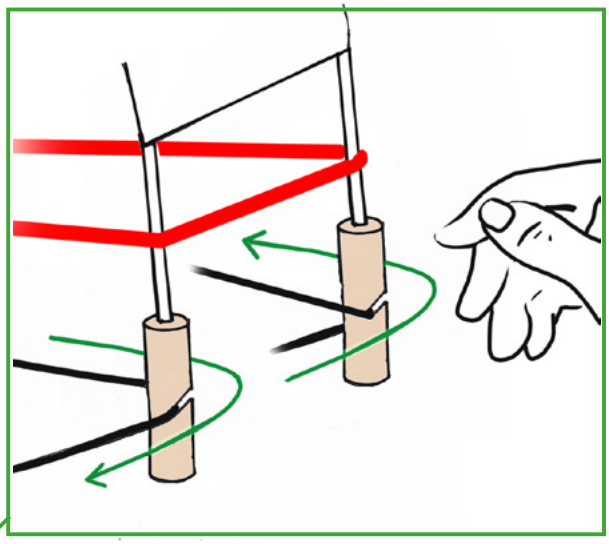

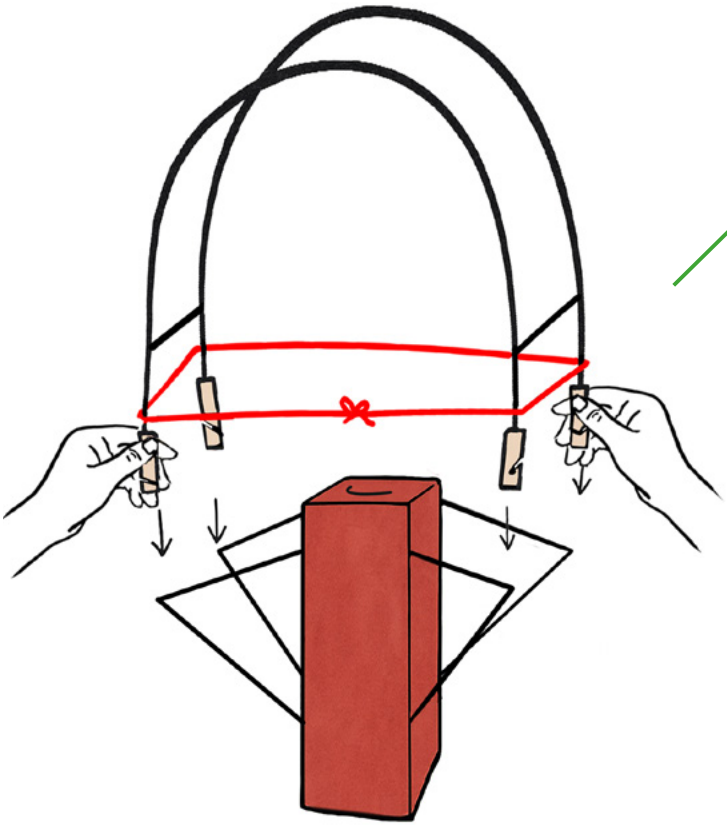



On the clay base, place the black cords **on each side**, then position the paper shade on top and **insert the cords into the slots.**

Thread the cords **from the inside to the outside of the wooden handles**, following the image above.

Caution: Before untying the ribbon, make sure the cords are correctly placed in the slots!

Maison Cédrat

PACKAGE & ASSEMBLY

4 undo the ribbon !

Once the cords are correctly **positioned in the slots**, you can untie the ribbon to complete the assembly.

Keep the ribbon, if you move the lamp or if you want to change the shade, you can reuse it to uninstall the shade following this instruction.

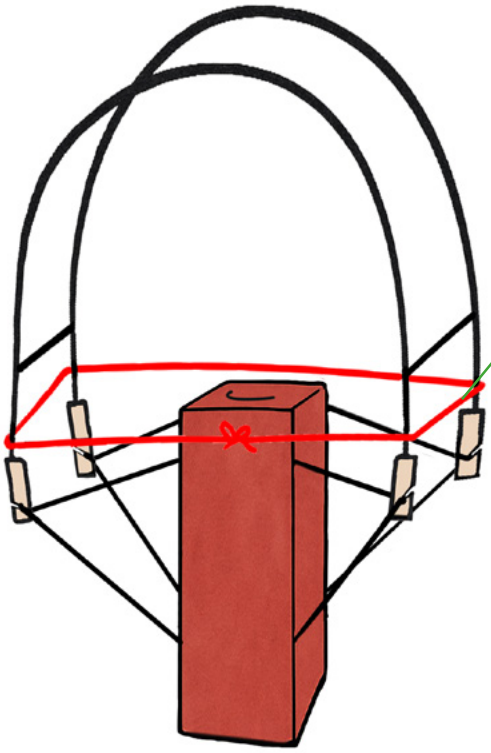

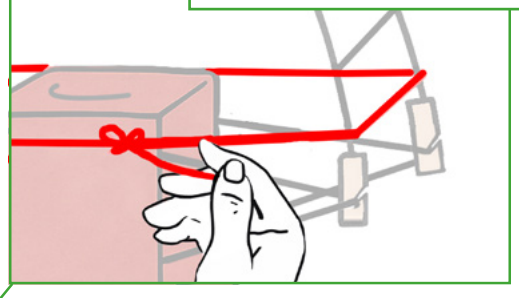

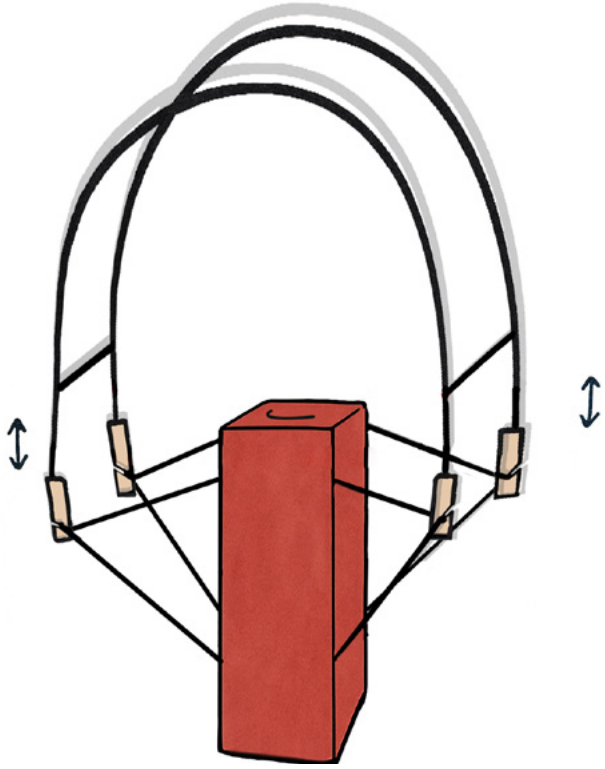

Finally, manipulate the wooden handles and **slide them along the cord to loosen the cord.**

Maison Cédrat

PACKAGE & ASSEMBLY

5 screw in the bulb !

1. **The lamp is unplugged.**
Tilt the paper shade backward using the wooden handles.

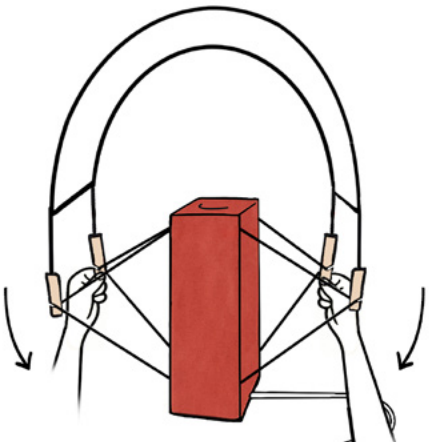

2. Screw the E12 bulb .
Plug the lamp in.

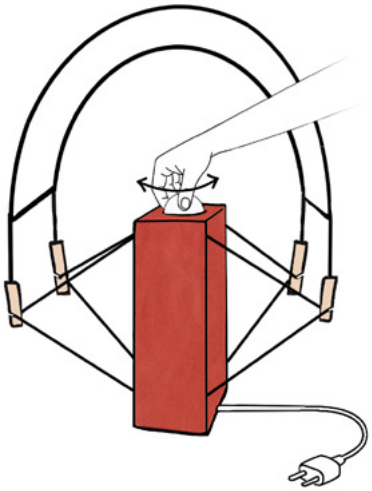

OR IF YOUR HAND DOESN'T FITS INTO THE HOLE IN THE CLAY BASE.

1. Remove the wooden key.

The lamp is unplugged.
Gently remove the wooden locking piece inserted in the clay base

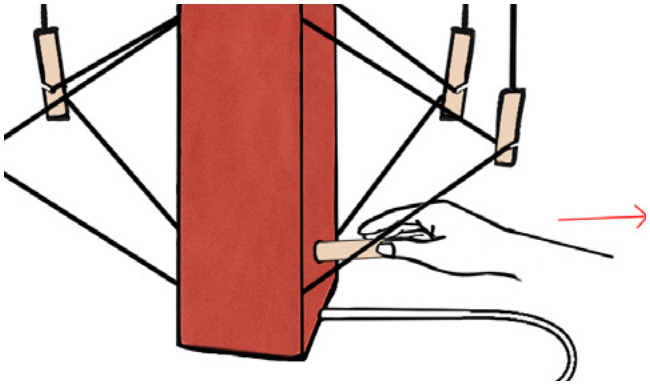

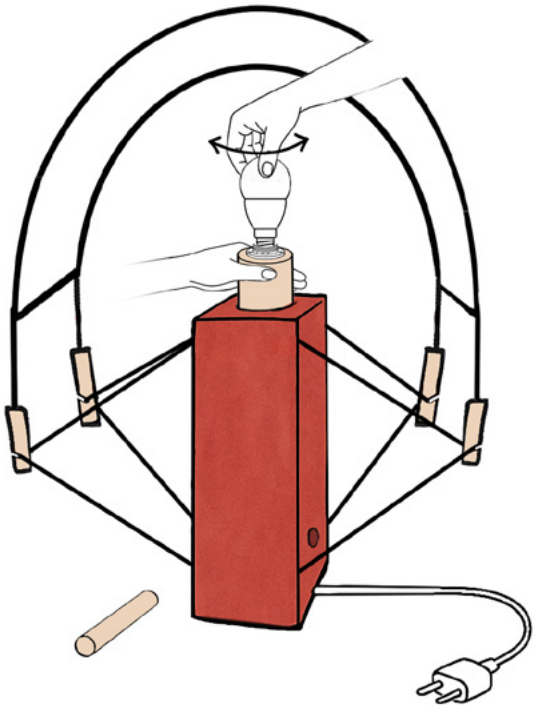

2. Screw the bulb

You can now **lift out the main cylinder from the top and replace the bulb.**

To help you remove the cylinder, you can tilt the lamp base and push the cylinder out from underneath, pulling the cable with it.

After this operation, make sure to **place the cylinder back inside the brick base,** aligning the holes, then **slide the wooden key back into the brick to lock the cylinder in place.**

Maison Cédrat

PACKAGE & ASSEMBLY

6 Dimmer instrucion:

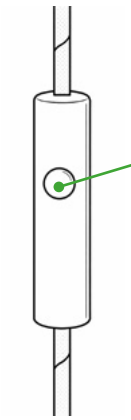

ON & OFF: quick pressure (less than 1sec.)
Min & Max: Continuous pressure (at every release of the button presure the direction of the dimming is inverted).

Now you can plug in the lamp and switch it on.
Thank you and enjoy!

7 Orientation of the lampshade

The lampshade can be adjusted by moving the wooden handles. Simply slide them along the cords to adjust the height and angle of the lampshade.

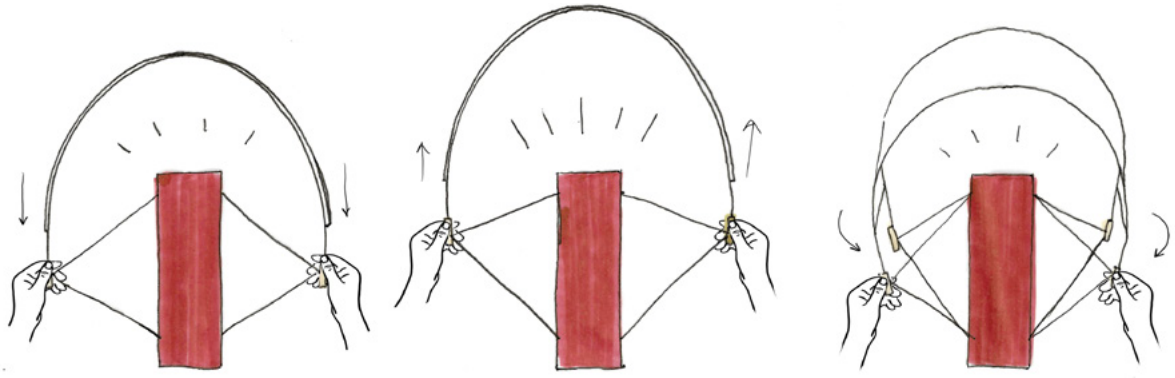

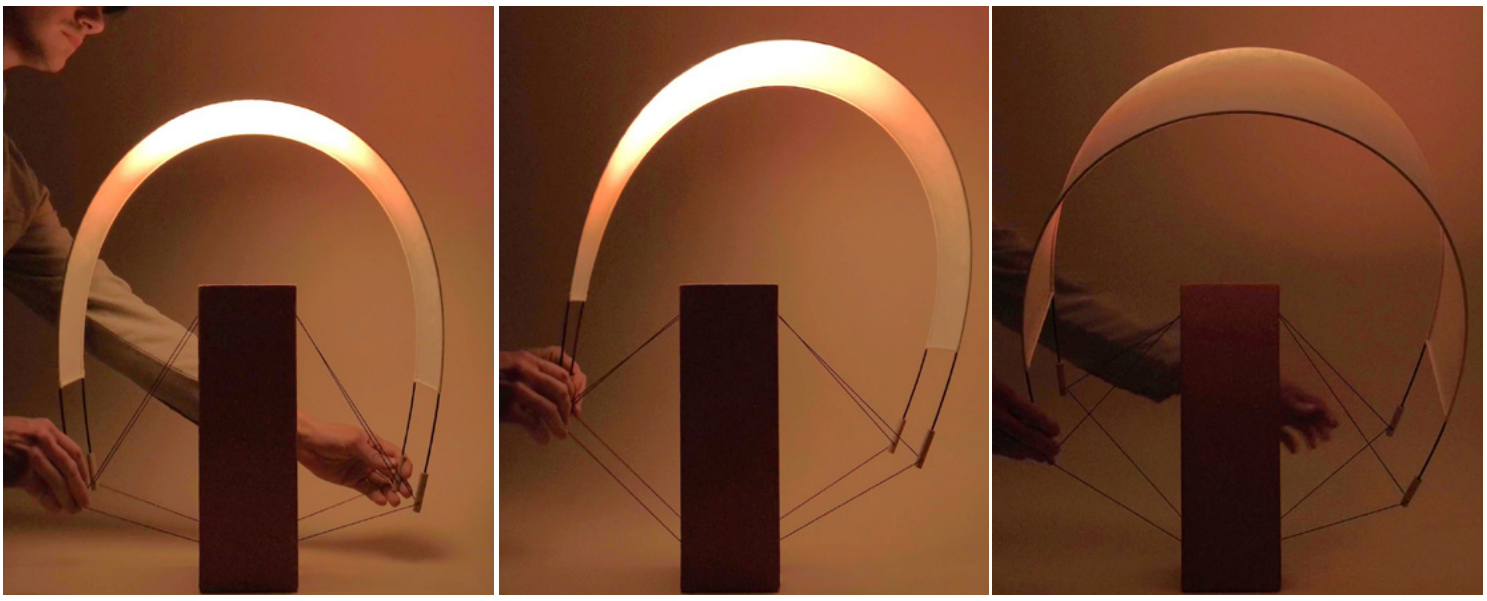

Maison Cédrat

MATERIALS & CARE INSTRUCTIONS

COMPOSITION & TRACEABILITY :

High-quality materials and French manufacturing

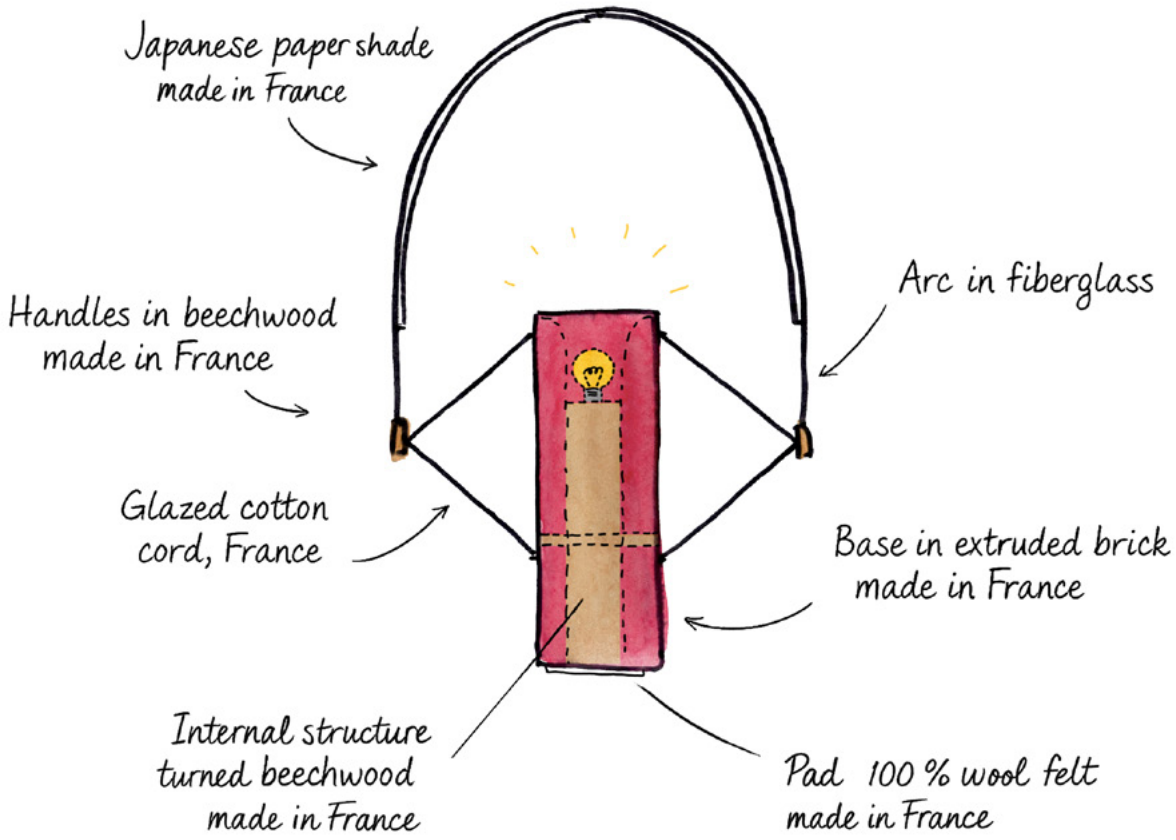

HANDLING & MAINTENANCE :

• The lampshade must always be handled using the handles (see diagram of the luminaire) in order to avoid any damage to it. If this is the case, E.I. Pierre Samouilla cannot be held responsible for any damage.
• Once unplugged, the luminaire can be moved by carrying the base (see luminaire diagram) with both hands.
• Never pull on the power cable to turn off the light fixture.
• Dust the lampshade and base carefully using a duster or microfiber cloth.
• Never touch the lampshade with your fingers to avoid leaving marks or traces.
• **If you would like to change the shade, contact us: maisoncedrat@gmail.com**

Maison Cédrat

BULB REPLACEMENT

1 Unplug the lamp and tilt the paper shade

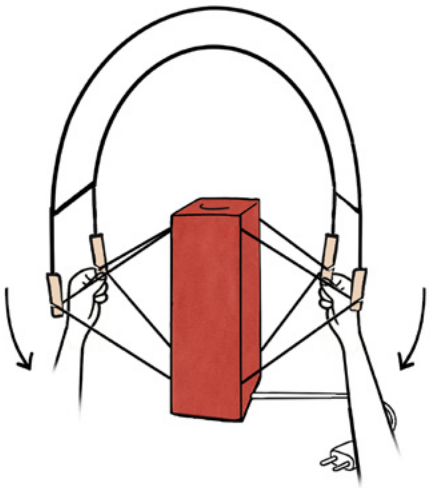

Always unplug the lamp before handling the bulb.
Tilt the paper shade backward using the wooden handles.

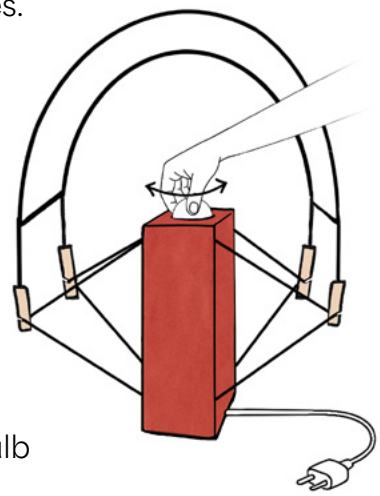

2 Change the bulb

Unscrew the bulb, remove it, then screw in a new E12 bulb (preferably of the same type).
Plug the lamp back in.

OR IF YOUR HAND DOESN'T FITS INTO THE HOLE IN THE CLAY BASE.

2 Remove the wooden key.

Gently remove the wooden locking piece inserted in the clay base

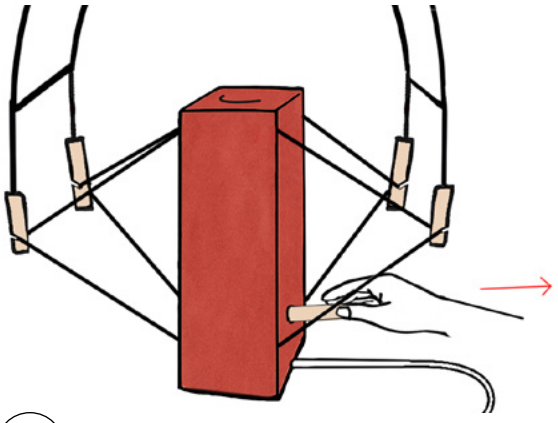

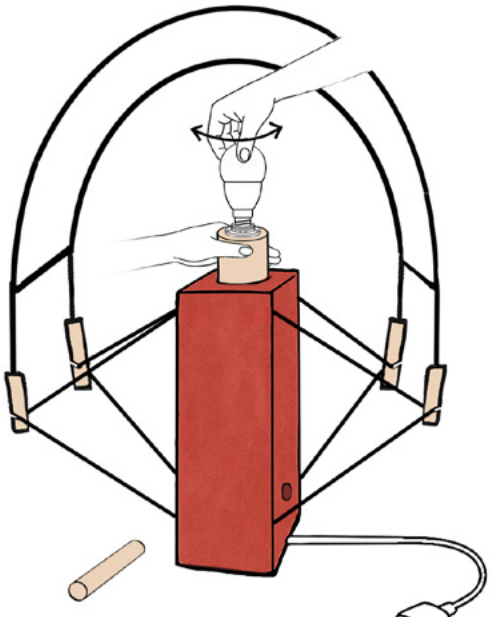

3 Change the bulb

You can now **lift out the main cylinder from the top and replace the bulb.**
To help you remove the cylinder, you can tilt the lamp base and push the cylinder out from underneath, pulling the cable with it.
After this operation, make sure to **place the cylinder back inside the brick base,** aligning the holes, then **slide the wooden key back into the brick to lock the cylinder in place.**

Caution: Ensure that the wooden key goes through the cylinder and emerges on the opposite side before completing the assembly and reconnecting the lamp.

REPAIRABILITY : *in the event of a breakdown*

• The LED source of this luminaire is repairable. We recommend replacing the source (**LED bulb**) with a **source of equivalent power (6-7 W).**
• If you would like to change the shade, contact us: maisoncedrat@gmail.com

REPAIRABILITY : *in the event of a breakdown*

• The LED source of this luminaire is repairable. We recommend replacing the source (**LED bulb**) with a **source of equivalent power (6-7 W).**
• If you would like to change the shade, contact us: maisoncedrat@gmail.com

GUARANTEE :

This product is guaranteed for 3 years. The warranty concerns the replacement of any defective part, but cannot cover normal wear and tear of the device, nor damage that could occur following improper use of the device.
After-sales service:
For any repair, under or out of warranty, please contact your usual dealer - with your invoice - or contact us: **maisoncedrat@gmail.**

ENVIRONMENTAL PROTECTION :



This symbol means that this luminaire should not be thrown into a household trash bin. It includes components that may be harmful to the environment and health.

This fixture also contains components that can be reused or are recyclable. Please consult the information in your municipality regarding the collection of electrical waste. If this luminaire includes a bulb, do not put it in the trash either, please return it to your point of sale or an appropriate collection center.



This symbol means that this luminaire should not be used outdoors.

17 • Maison Cédrat | Objects | Textiles | Lightings

CONTACT

For any questions,
feel free to contact us at

Email : maisoncedrat@gmail.com

Phone : +33 (0) 6 85 91 16 15

Instagram : @maisoncedrat
Website : www.maisoncedrat.com

Thank you !