

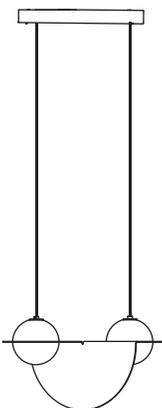


LAURENT PARALLEL CEILING MOUNT

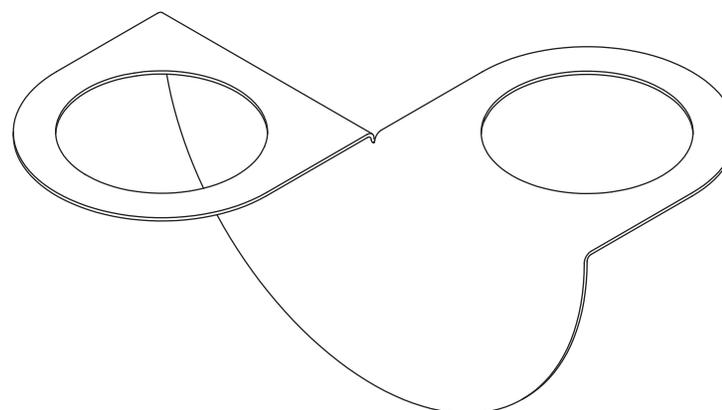



- Please read entire manual before beginning installation
- To be installed by an electrician to an electrical box
- Use appropriate screws and anchors where necessary
- Wear enclosed gloves when handling lamp
- Handle materials with care. Please consult lamp maintenance sheet
- Should be used exclusively as a lamp and not as a shelving, display or hanging unit

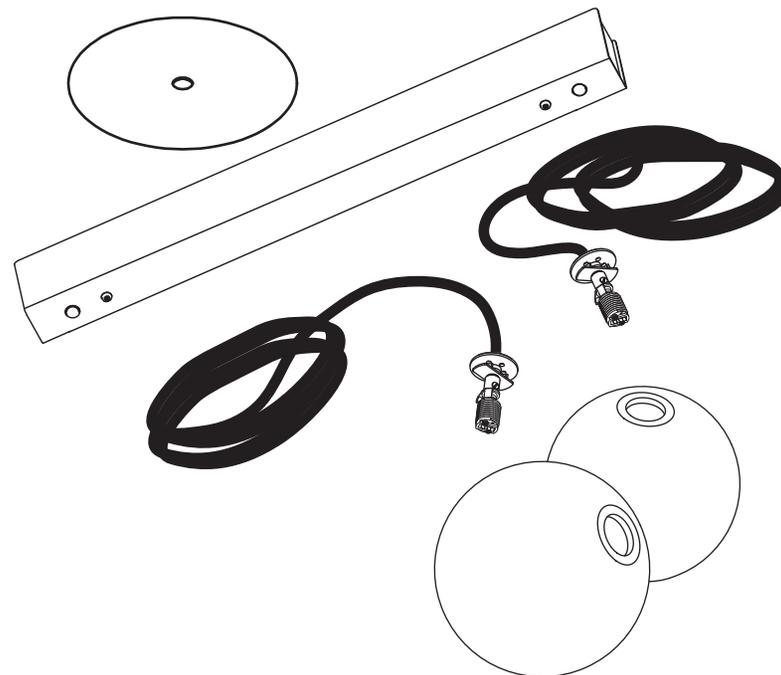

PLEASE NOTE


THIS IS AN EXAMPLE OF THE LRT 01.
HOWEVER, ALL MODELS FOLLOW
THE SAME INSTALLATION PROCEDURE.

1

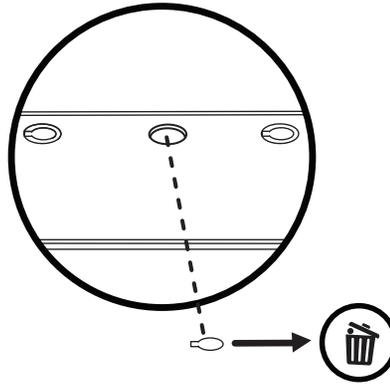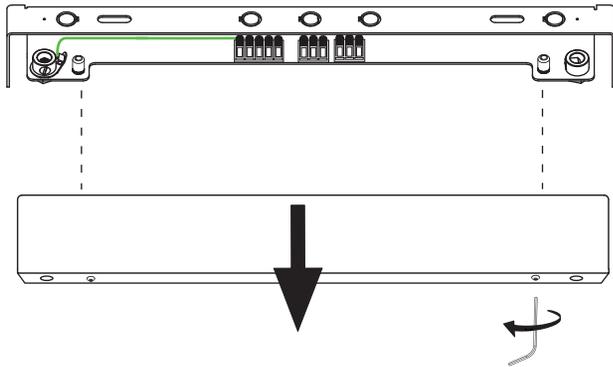


Choose desired knockout depending on electrical box alignment.

2

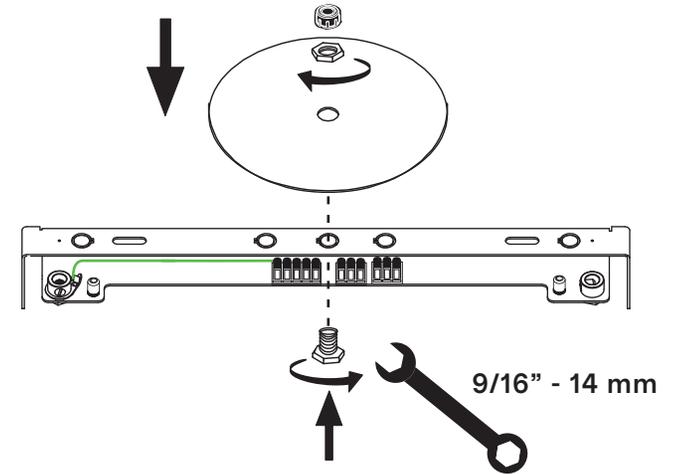


3

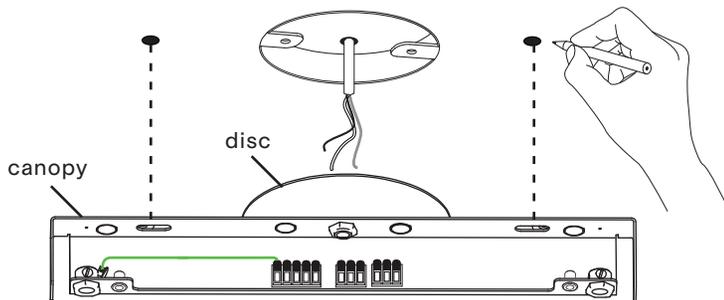


Before marking your anchor points, align the ceiling disc with the center of your junction box. Use canopy as a guide.

Make sure to use appropriate anchors when necessary (not provided).

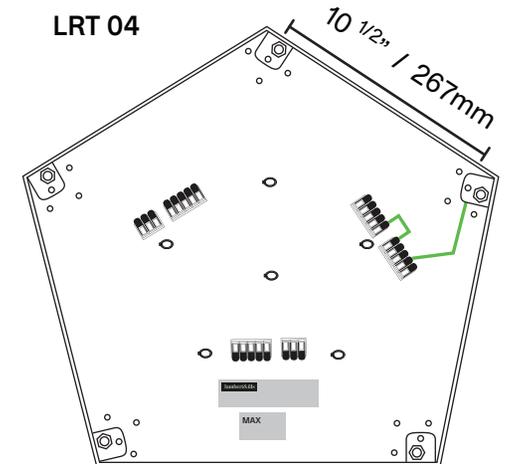


4


Make connection within junction box or canopy.

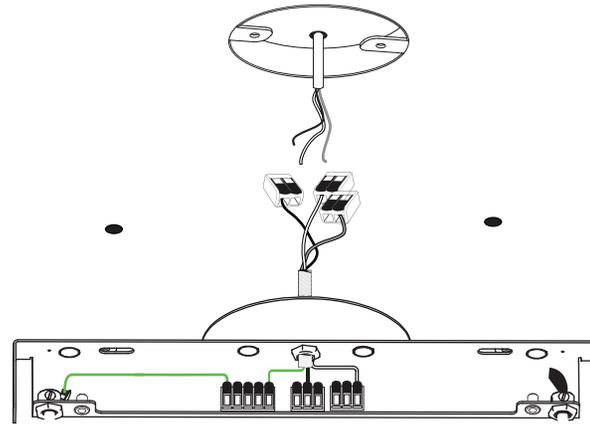

FOR 120V WIRING

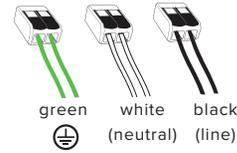


FOR 220V-240V WIRING

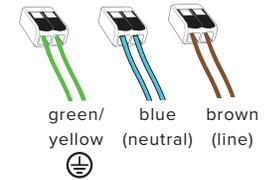


11mm

Insert provided fiberglass sleeve before making connection.


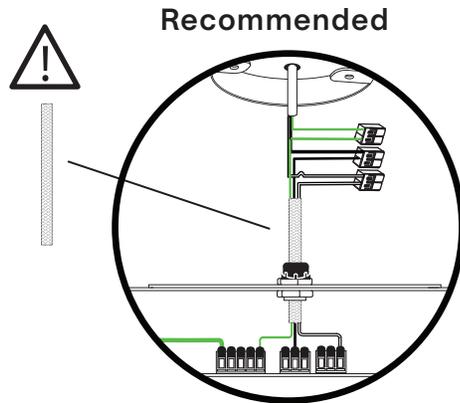


OR

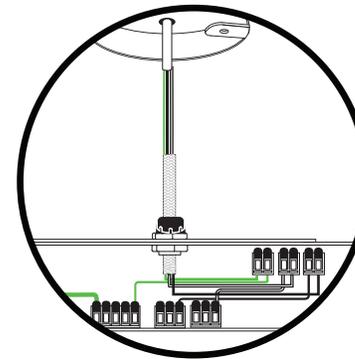

⚠ Only possible if wires are 0.20 to 4mm (20 to 12 gauge) solid or stranded.


5

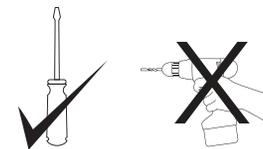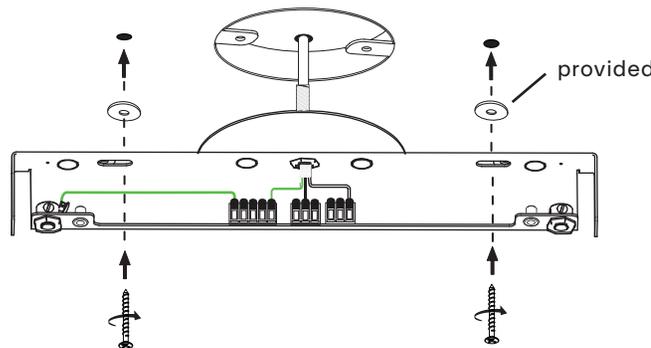

Avoid scuffing wires during this operation.

IMPORTANT MEASUREMENTS FOR CORRECT INSTALLATION


(ALL LAURENTS HAVE SUFFICIENT WIRES TO CONNECT AND INSTALL A MAXIMUM TOTAL CORD LENGTH OF 84" / 213 CM)

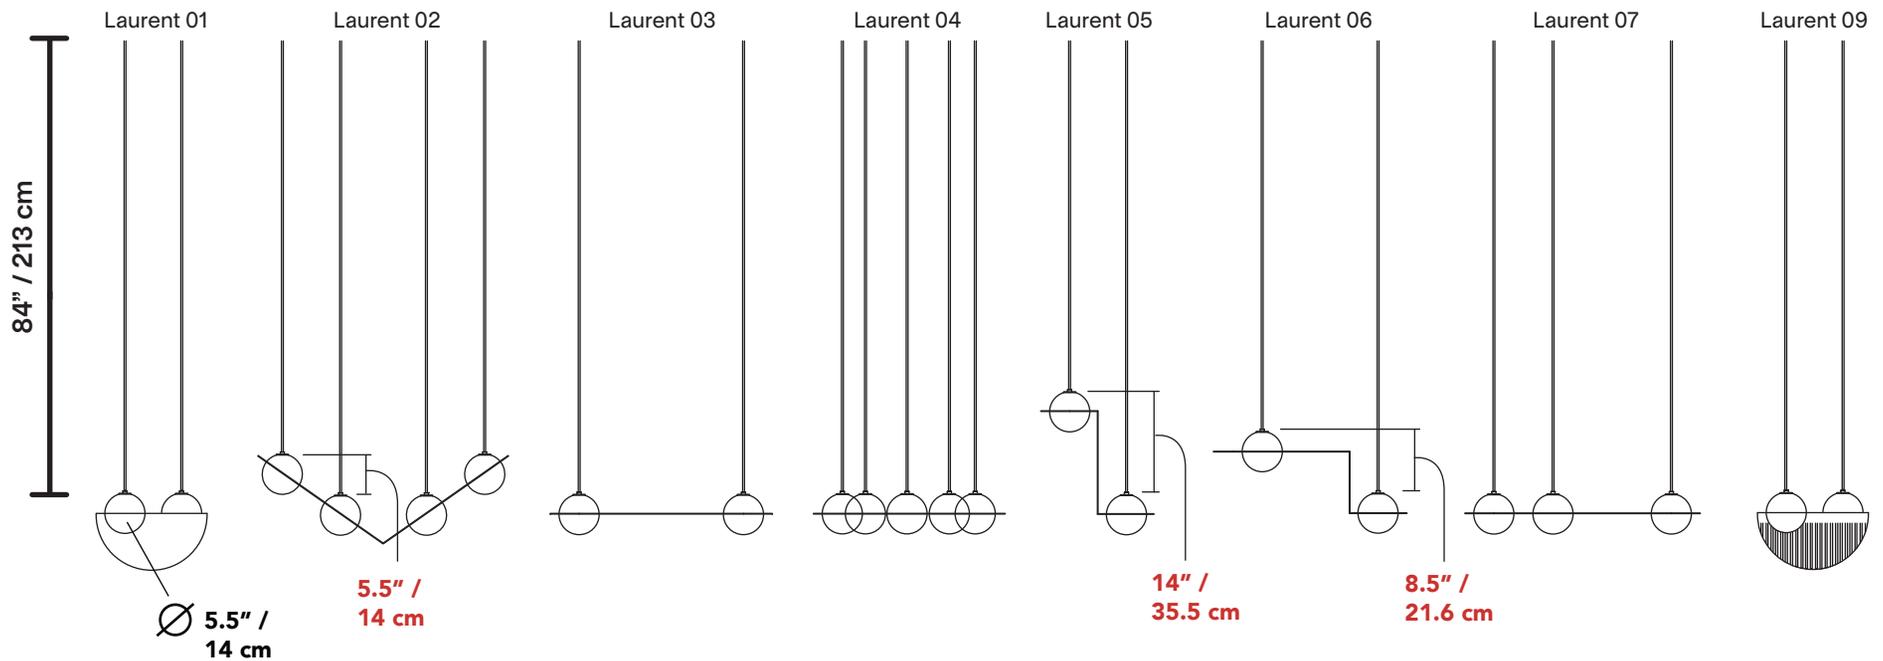

6

Trim wires to desired length (X).
Leave just enough wires inside canopy
to reach connectors, add that
length to the desired X height.

Leave 3" / 8 cm of sleeved wire
after strain relief.

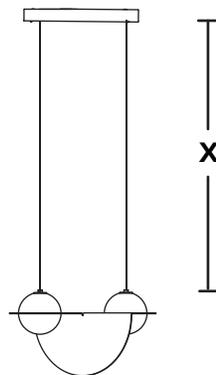


7



Feed wires through canopy.

Secure strain relief.

Make connections from luminaire wires.







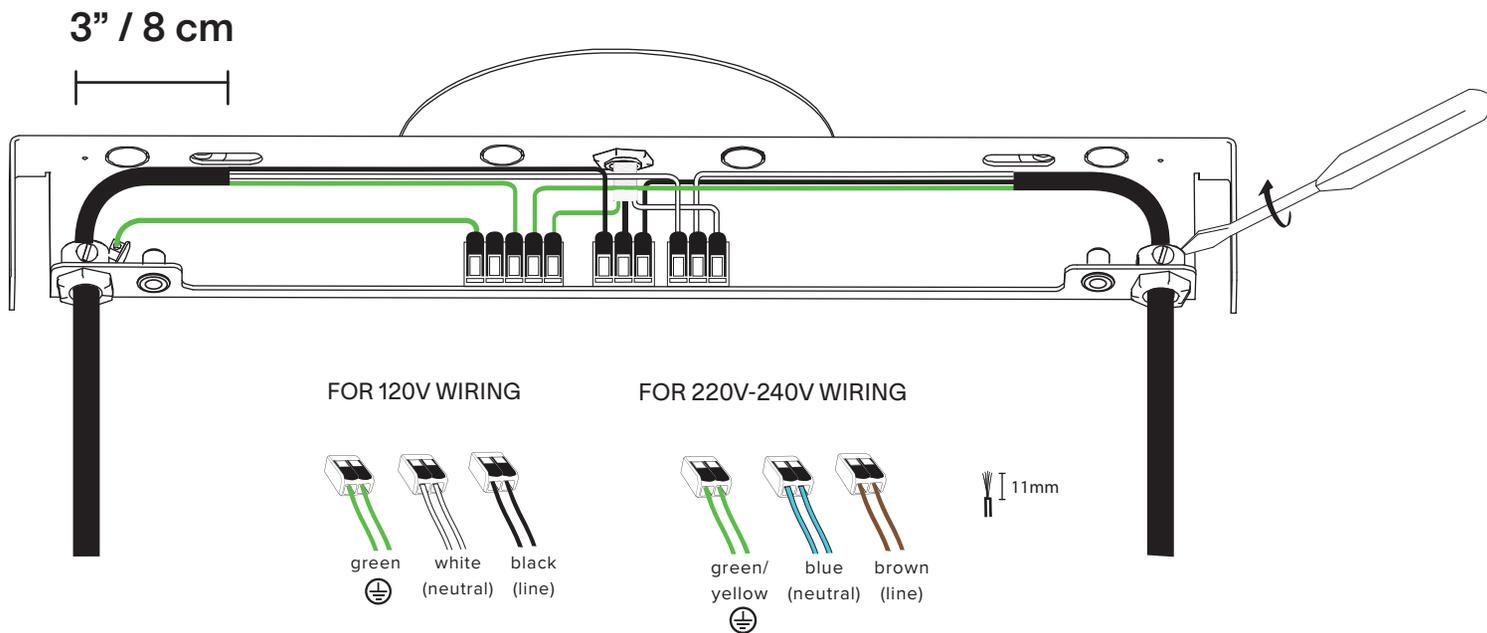


8

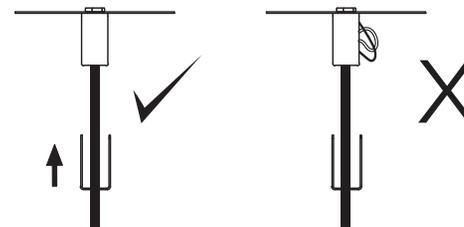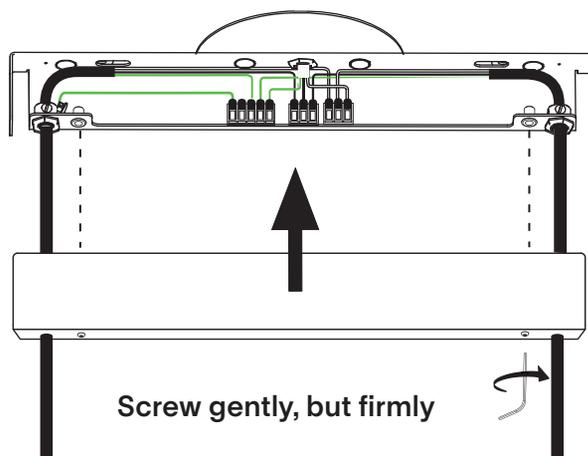


Ensure no wires are clipped or pinched during this operation.

9

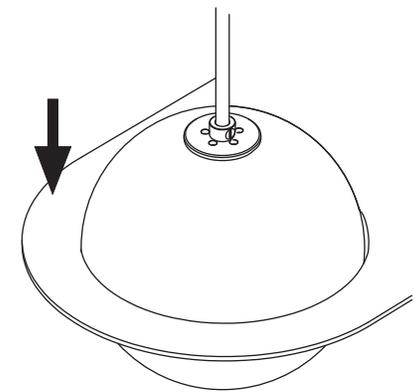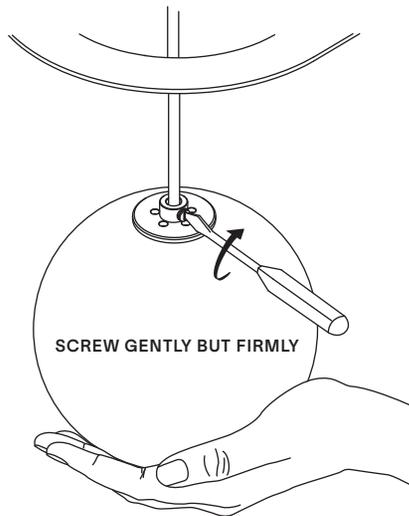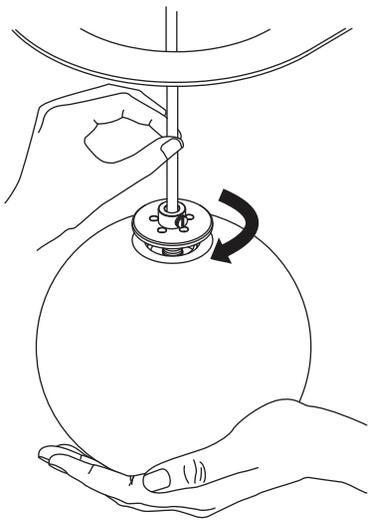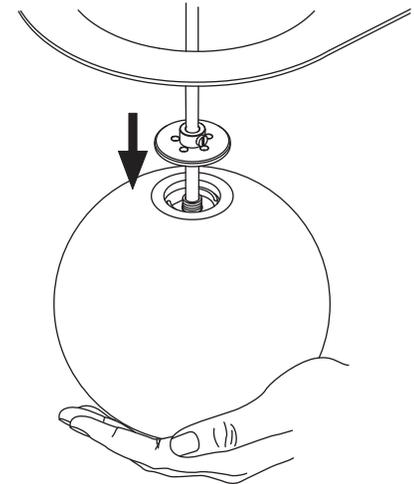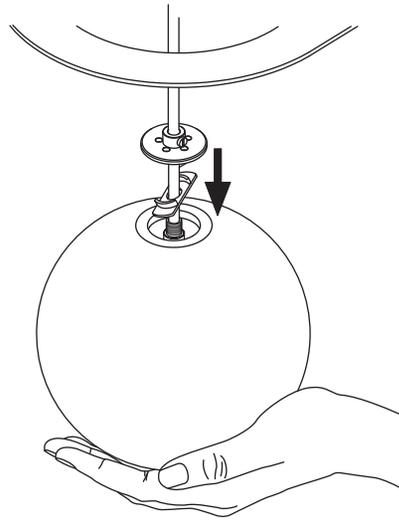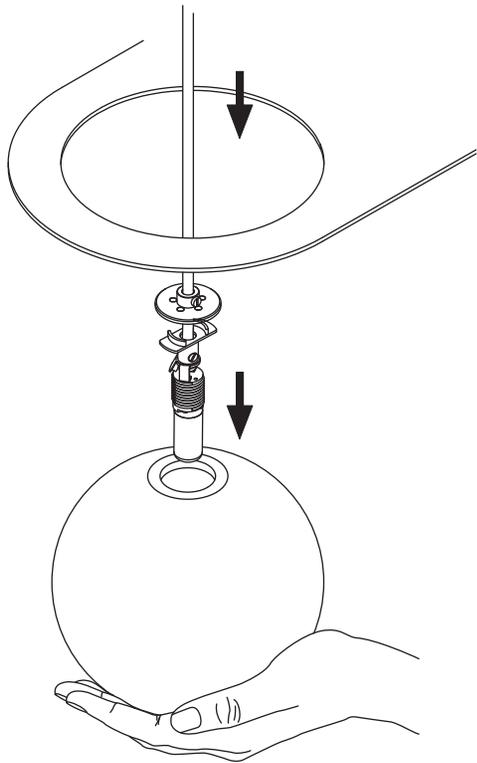

10

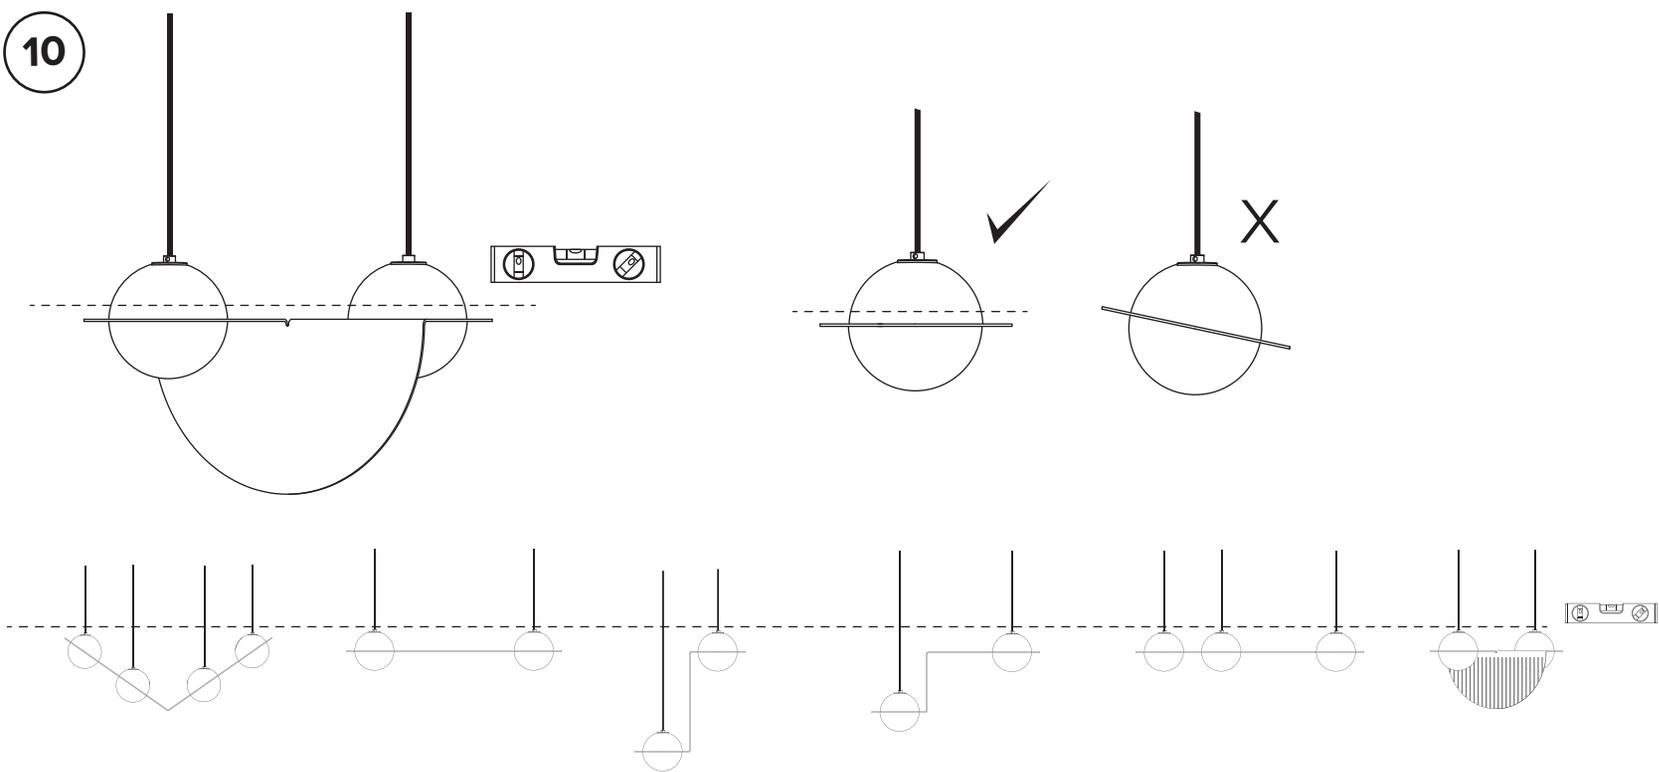

If necessary make micro adjustments inside the canopy.

SCREW GENTLY BUT FIRMLY

